


Parts Identification Guide
PIC002/0904




PowerFill Vacuum Conveying System



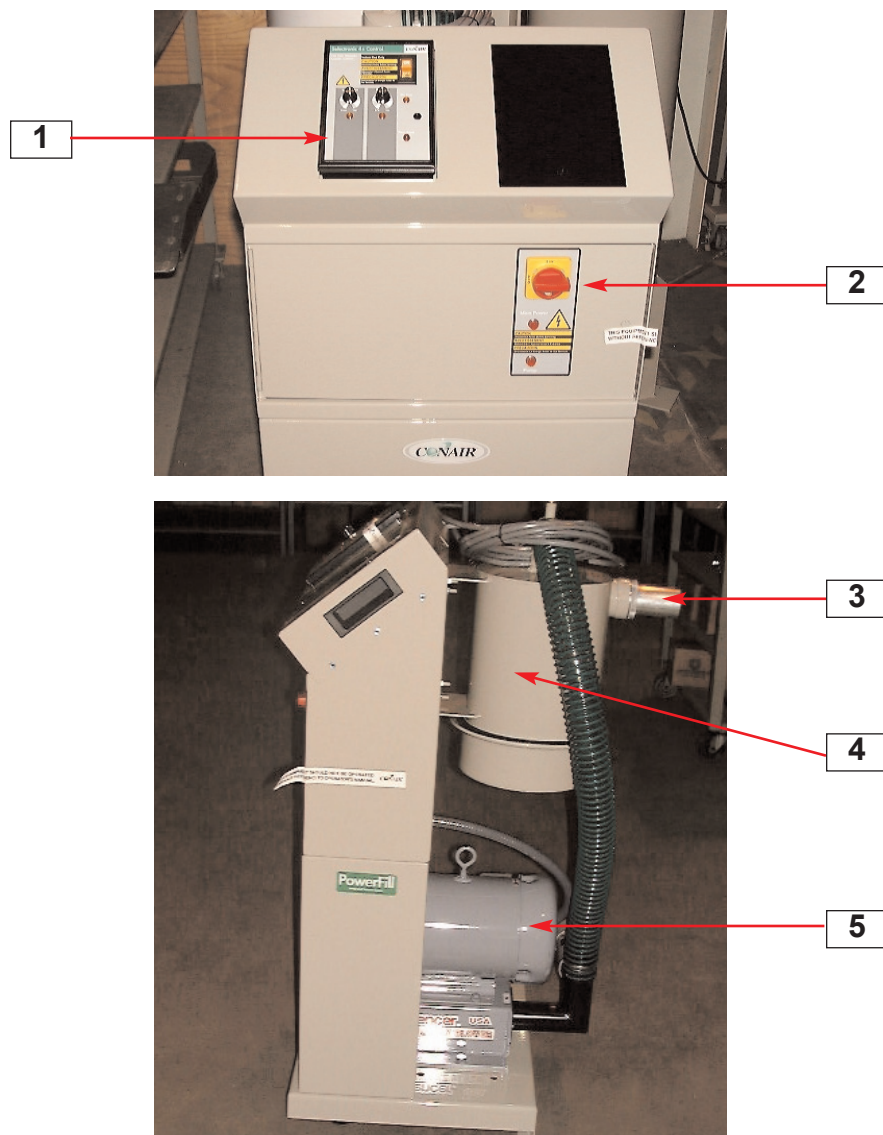

Powerfill

1. Control Assembly
2. Disconnect Switch
3. Tube Adapter
4. Filter Assembly
5. Blower

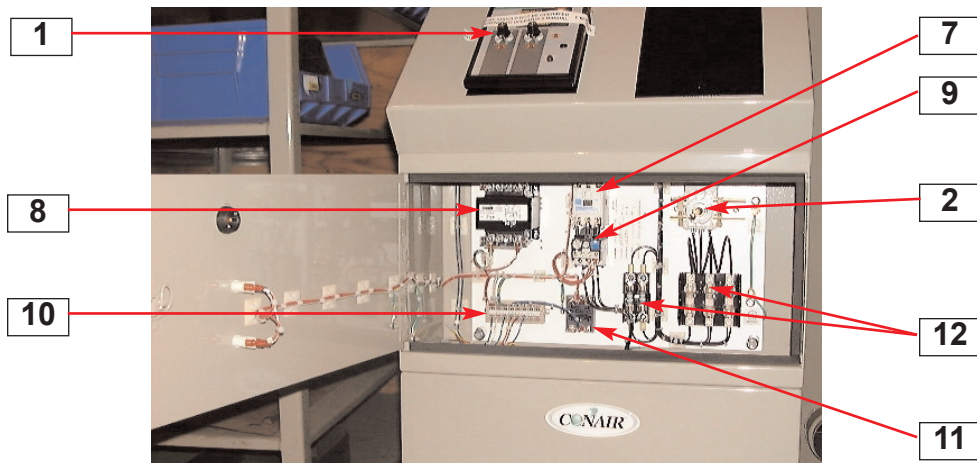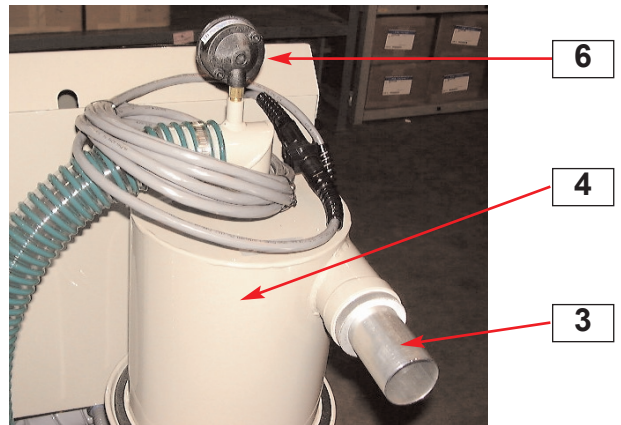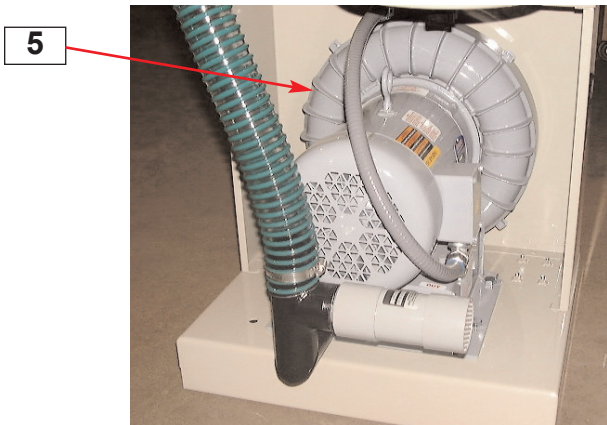

Powerfill

- 1. Control Assembly
- 2. Disconnect Switch
- 3. Tube Adapter
- 4. Filter Assembly
- 5. Blower
- 6. Vacuum Gauge
- 7. Contactor
- 8. Transformer
- 9. Overload
- 10. Terminal Strip
- 11. Relay
- 12. Fuse Block / Fuses